



MODEL: ZE129-T

Automatic Shoe Cover Machine



IMPORTANT FOR ALL HOSPITALS



FOR CLEANER ENVIRONMENT



USER FRIENDLY



PREVENTS INFECTIONS



ENHANCE THE IMAGE OF THE HOSPITAL

www.zirarenterprises.com




Applicable Sites for Shoe Cover Machine:

1. Medical :	Dental Clinic, Laboratory, Medical Center, Hospital (Operating Room,CT room, X-ray Room, ,ICU room, VIP Room, Blood Center), etc
2. Factory:	Food factory, Pharmaceutical factory, Cosmetics factory, Electronic factory, Chemical industry, Offices, Computer Data Center, etc
3. Public place :	High Grade Club, Hotel, Museum, Top Grade Meeting room, Spa Center, Fitness Center, etc
4. Real Estate:	Model house, High grade residence, etc
5. Education System:	Kindergarten, School, Computer room, Research and teaching, etc

www.zirarenterprises.com

›Working Principle


This Automatic Shoe Cover Machine uses the principle that **Thermal Shrinkable film** will shrink at proper temperature. It can **automatically** output and cut the PVC film and provide hot air . This machine only takes about **three seconds** to make PVC film into shoe cover and wraps people's shoes.

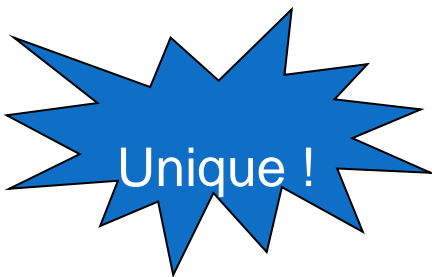

➤ Why choose Thermo Shrinkable shoe cover machine

Advantage	
1. Economical	The cost of PVC film is economical than traditional shoe cover, the thickness is about 28 micron, it is more durable
2. Large capacity	One roll film can be made into 500 pairs shoe cover, for other shoe cover machine, the shoe cover capacity is only 50-100 pairs.
3. Design	Latest . Durable www.zirarenterprises.com
4. Convenience	It takes about 30seconds to replace the film roll, then it can use 1000 times.
5. Comfortable	It is easy to use and comfortable.
6. Environment-friendly	The PVC film has passed the RoHS certificate, it is environment-friendly

>How it works ?

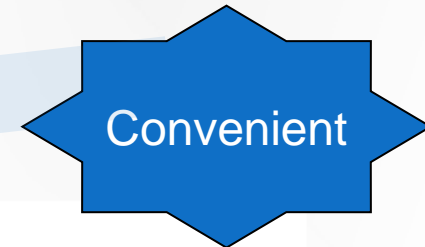

Step your foot on the position with "PRESS"

First Step



Press the footboard till bottom wait for 2-3 seconds

Second Step



Lift up foot

Third Step

>Product Feature



Large capacity
one roll PVC film
can make 1000pcs
shoe cover

www.zirarenterprises.com

Global First, Patent Design

›Product Details



*It has wheels
easy to move*



www.zirarenterprises.com

***With Leakage
protection switch
Ensure safe use***

Product Details



From the LCD Display

- ① *It shows the remaining quantity of shoe cover*
- ② *It shows the room temperature and time*
- ③ *It can adjust the temperature level of the machine*
- ④ *It can adjust the length of PVC film*
- ⑤ *It can set up the working time ,then machine can turn on/off automatically*

Product Specification

Presently only GOLD color available



Silver color



Gold color



Copper brown

www.zirarenterprises.com

Capacity of shoe cover	1000pcs
Design Useful Life	300,000 times
Operating Voltage	220V \pm 5% or 110V \pm 5%
Maximum Power	1300W
Standby Power	75W
Preheating Time	\approx 120s
Film-delivering Time	3s
Film Shaping Time	3s
Material of Outer Case	ABS
Dimension of Machine	78 x 44 x 32 cm
Dimension of Carton	87 x 50 x 40 cm
Net Weight	About 21kg
Gross Weight	About 27kg

➤ Why choose Quen Thermo Shrinkable shoe cover machine

Advantage	
1. Economical	The cost of our PVC film is economical than traditional shoe cover, the thickness is about 28 micron, it is more durable
2. Large capacity	One roll film can be made into 500 pairs shoe cover, for other shoe cover machine, the shoe cover capacity is only 50-100 pairs.
3. Long design life	The design life is 300,000 Times
4. Convenient	It only takes about 30s to replace the film roll, then it can use 1000 times consecutively.
5. Comfortable	It is easy to use and comfortable to wear.
6. Environment-friendly	The PVC film has passed the RoHS certificate, it is environment-friendly

www.zirarenterprises.com



For home、real estate



For meeting room



For clean room



For hotel、club



For laboratory

www.zirarenterprises.com



www.zirarenterprises.com

